Communication Protocol Interface Guide

A Series

Anesthesia System

mindray

Table of Contents

1 Overview 1-1
1.1 Introduction 1-1
1.2 References 1-1
1.3 Physical Connections 1-2
1.3.1 Network Port 1-2
1.3.2 Serial Port 1-3
1.4 Interface Protocols 1-4
1.4.1 DEC Profile: Unsolicited Results 1-4
1.4.2 CT Profile: Time Synchronization 1-4
1.5 Use Cases 1-5
1.6 Applicable Scope 1-6

2 Communication Protocol Layers 2-1
2.1 Introduction to the A Series Export Protocol 2-1
2.1.1 Physical Layers 2-1
2.1.2 TCP Layer 2-3

3 System Setup 3-1
3.1 Anesthesia System Setup 3-1
3.1.1 Network Port Setup 3-2
3.1.2 Serial Protocol Setup 3-4
3.1.3 Demographics Setup 3-5
3.2 Time Synchronization Setup 3-7

4 Message Frame 4-1
4.1 RS-232 frame 4-1
4.2 Ethernet frame 4-1

5 A Series Export Protocol 5-1
5.1 DEC Profile: Unsolicited Results 5-1
5.1.1 Supported Transmission Data 5-2
5.2 Message Details: Observation and Waveform Data 5-3
5.2.1 MSH Segment 5-4
5.2.2 PID Segment 5-5
5.2.3 PV1 Segment 5-6
5.2.4 Observation Block OBR Segment 5-7
5.2.5 Observation Block OBX Segment 5-8
5.2.6 Waveform Block OBR Segment 5-9
5.2.7 Waveform Block OBX Segment 5-10

5.3 Message Details: Alert Data 5-12
5.3.1 MSH Segment 5-13
5.3.2 PID Segment 5-13
5.3.3 PV1 Segment 5-13
5.3.4 Alert OBR Segment 5-13
5.3.5 Alert OBX Segment 5-14

6 Time Synchronization 6-1
6.1 CT (Consistent Time) Profile: 6-1
6.2 Introduction to the SNTP Protocol 6-2
6.2.1 UDP Layer 6-2
6.2.2 Packet Assembly 6-3
6.2.3 SNTP C/S Illustration 6-4

A CRC Calculation A-1
A.1 Overview A-1
A.2 CRC Calculation Guidance A-1

B A-Series HL7 Export Nomenclature B-1
B.1 General ID Allocation Scheme for “99MNDRY” Terms B-1
B.2 A Series - Anesthesia Machine Containment Tree B-1
B.3 Units of Measure B-2
B.4 Ventilator / Anesthesia Machine Settings IDs B-3
B.5 Ventilation Modes B-4
B.6 System Status B-5
B.7 Patient Measurements B-6
B.8 Ventilator / Anesthesia Machine Measurement IDs B-6
B.9 Airway Gas Analyzer Measurement IDs B-7
B.10 Waveform IDs B-8
B.11 Alert IDs B-9

C A Series HL7 Simulator Instructions C-1
C.1 Overview C-1
C.2 Simulator Setup C-1
C.3 Keyboard Shortcuts C-3

1 Overview

1.1 Introduction

This guide is intended to be used by software developers and/or systems integrators that wish to communicate with Mindray A Series anesthesia systems that have software bundle version 02.12.00. Future versions of firmware may support additional measurements, settings and/or modes.

The A Series Anesthesia Systems can send out the Alert data, Observation data and Waveform data via Ethernet.

The A Series Anesthesia Systems can send out the Alert data and Observation data via Serial Port

The A Series Anesthesia Systems can communicate measurements and settings to other systems such as clinical IT systems. This is done using an HL7 based protocol based on the Integrating the Healthcare Enterprise (IHE) Patient Care Devices (PCD) Device to Enterprise Communication (DEC) profile. This document provides specifics on how the A Series Anesthesia Systems implement this profile.

1.2 References

HL7 V2.6

IHE PCD Technical Framework Volume 1

IHE PCD Technical Framework Volume 2

IHE ITI Technical Framework Volume 1

IHE ITI Technical Framework Volume 2

IHE PCD Rosetta Terminology Profile

ISO/IEEE 11073-10101 and 11073-10101a Nomenclature

IETF RFC 2030 SNTP

1.3 Physical Connections

The A Series anesthesia system can communicate via the Network Port and the Serial Port. Both ports can be used simultaneously.

1.3.1 Network Port

The A Series anesthesia system can communicate using Ethernet. A standard 10/100 Base-T connector is located at the back of the machine for this purpose. Refer to the illustration below:

1.5 Use Cases

There are two general Use Cases that have been considered in development of the A Series Interface Protocol:

1. Point-to-Point:

Interface of an A Series Anesthesia System (DOR) directly to a local data consumer (DOC) such as a patient monitoring system or clinical information system. This scenario can be an implemented via either the Serial Port (RS232) connection or the Network Port (Ethernet) using a point-to-point topology.

It is unlikely that the DOC will also support the Time Server functionality, so that any data collected by the DOC should be time-stamped by the DOC as of the time of receipt. In a point-to-point scenario, the DOC is also responsible for associating the data with the appropriate patient.

2. Networked:

Interface of an A Series Anesthesia System over a network using the Network Port to a DOC which is typically a clinical IT system. In this case the network probably also has a network Time Server which the Anesthesia System can use to synchronize its clock.

In this situation it is also very important that the system end-user associate the device with the proper patient either through location or through entry of key patient demographics into the A Series anesthesia system.

1.6 Applicable Scope

Currently, only the DEC and CT profiles are applicable to the A Series anesthesia system.

2 Communication Protocol Layers

2.1 Introduction to the A Series Export Protocol

The Export protocol used by the Mindray anesthesia systems is based on the technical framework specified by the IHE (Integrated Healthcare Enterprise) PCD (Patient Care Device) domain.

The syntax is based on HL7 and the semantic system used is based on ISO/IEEE 11073-10101 as documented in the IHE PCD Rosetta Profile to the extent that Reference IDs and codes are published for A Series measurements and settings. If not available, then a Private code set has been used which will be substituted for Standards based sets when they are available.

While the HL7 protocol defines the syntax of a message it does not specify the framing (beginning and end) of a message. To mark the beginning and end boundaries of a message, the Minimal Lower Layer Protocol (MLLP, refer to HL7 Interface Standards Version 2.5.1) developed by the HL7 organization is used.

2.1.1 Physical Layers

2.1.1.1 RS-232 Physical Layer and Framing

The RS-232 port by default is configured to a 115200 Baud Rate, 8 Data bits, 1 Stop bit, Parity of none, and no flow control. The A Series allows configuration of other settings with a minimum baud rate of 57600. The Data bits must always be 8-bits. Message error checking is done via a CRC mechanism.

MLLP is used to denote the beginning and end of the message. MLLP is the Minimal Lower Layer Protocol which is used by HL7 for delimiting the start and end of a message.

The structure of an MLLP message is:

<SB> + <Message> + <CRC> + <EB> + <CR>

Where:

<SB> = Start Block (0x0B (VT))

<Message> = Optimized IHE-PCD HL7 Message

<EB> = End Block (0x1C (FS))

<CR> = Carriage return (0x0D (CR))

<CRC> = 16 bit CRC in 4 ASCII characters (see Appendix A).

A 16-bit CRC checksum of the message content (not including the MLLP framing information (SB, EB, and CR)) is appended at the end of any message. For more information refer to Appendix A.

A typical message will look like:

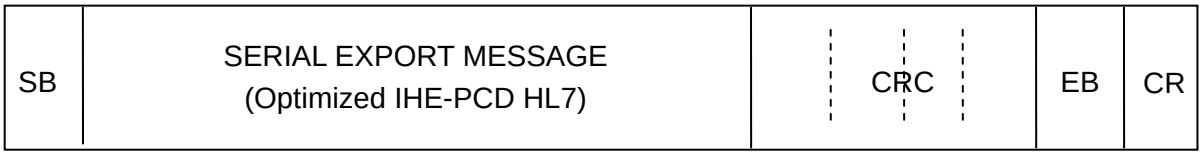

2.1.1.2 Ethernet Framing

The Ethernet protocol has a built in CRC check so that each message does not need any application level checking for transmission errors. MLLP is used for message start and end delimiting on top of TCP/IP. MLLP is the Minimal Lower Layer Protocol which is used by HL7 for delimiting the start and end of a message.

The structure of an MLLP message is:

<SB> + <Message> + <EB> + <CR>

Where:

<SB> = Start Block (0x0B (VT))

<Message> = IHE-PCD compliant HL7 Message

<EB> = End Block (0x1C (FS))

<CR> = Carriage Return (0x0D (CR))

A typical message will look like:

SB	NETWORK EXPORT MESSAGE (IHE-PCD HL7)	EB	CR

2.1.2 TCP Layer

The Figure below shows the Network communication layers involved in the communication between Mindray anesthesia systems and communication partners.

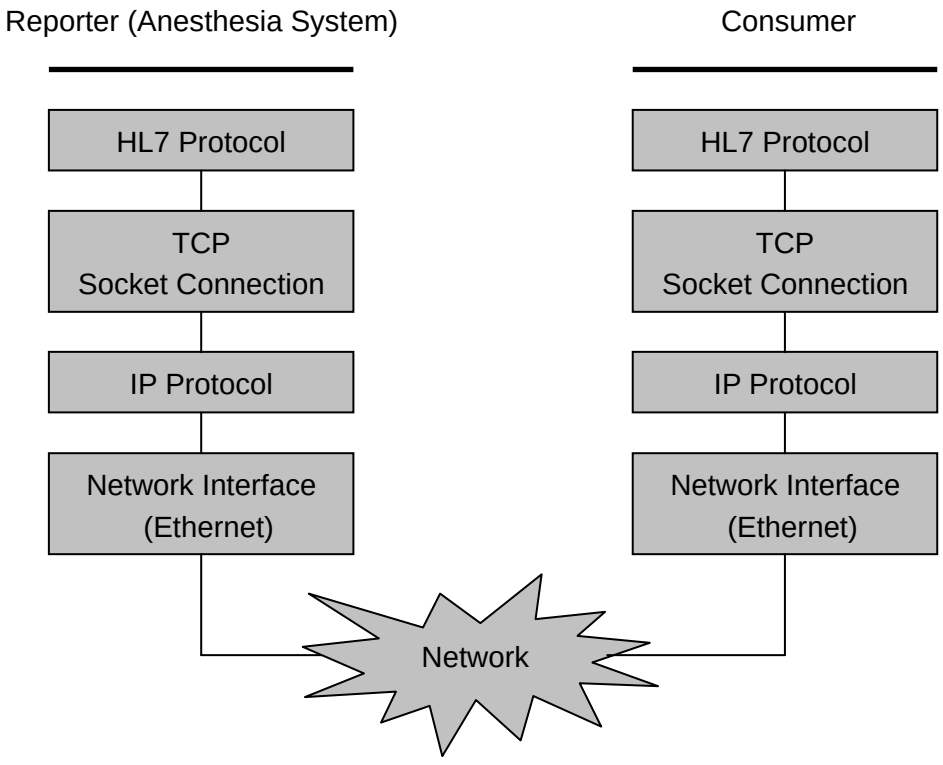

Communication Architecture (DEC Profile)

Corresponding to “TCP” layer in the Communication Architecture (DEC Profile).

Connection-oriented Socket Service

Use TCP/IP stack protocol

Ethernet driver interface

All networking information (IP, Port , Subnet, Gateway) is entered by the user manually

3 System Setup

3.1 Anesthesia System Setup

Before the anesthesia systems can communicate with a Data Consumer, the system must be properly configured as explained in this section. Please note that both the Serial port and the Network port can be used simultaneously, if desired, to connect to two different data consumers.

3.1.1 Network Port Setup

The technical user can enable the DOR function and configure the transmission frequency and server IP and port information via the user interface shown below (inside the red highlighted area). The A Series Anesthesia Systems network port can only communicate with one DOC at a time (i.e. the device must be reconfigured to talk to a different DOC).

The Data reporting interval can be set to Off, 10 Sec, 30 Sec, 1 Min, 5 Min, 30 Min, 1 Hour, 2 Hour, 6 Hour, 12 Hour or 24 Hour.

The waveform data reporting interval is 500ms. The user can press the Send Waveforms button to configure whether to send out the waveforms data via HL7.

The user can press the Send Alarms button to configure whether to send out the alarm data via HL7.

The user can press the Send Alarm Ack. button to configure whether to send out the acknowledgement flag in the alarm message.

The user can press the Set HL7 Compatibility to select the right bundle version that your development is based on.

3.1.2 Serial Protocol Setup

The technical user can choose whether the serial port will communicate using the HL7 (MR-Link) protocol, the MR-WATO protocol or be turned off. The MR-WATO protocol is for Mindray internal use only.

When the Protocol selection is set to “None”, the DOR function using the serial port will be disabled.

When the Protocol selection is set to “HL7”, the user can configure the transmission frequency, Baud Rate, Stop bit (1 or 2) and Parity via the user interface shown below (Pushing the Configure Serial button to enter this dialog). No flow control and the Data bits must always be 8-bits. The A Series Anesthesia System serial port can only communicate with one DOC at a time when the serial connection is established.

If the A Series device is installed in a network topology, a minimum set of demographics data must be entered so that the receiving system can associate the device with the correct patient. Different receiving systems have different requirements. Note that the location data will not be deleted or changed unless the user changes it which should occur whenever the A Series device changes location. Patient demographic data will be cleared whenever the patient is discharged.

The technical user can configure the following:

Interval: defines the time interval at which A Series request the standard time periodically.

Primary Server IP: defines the IP address of Primary Time Server.

Secondary Server IP: defines the IP address of Secondary Time Server.

The time synchronize interval can be set to Off, 10 Sec, 30 Sec, 1 Min, 5 Min, 30 Min, 1 Hour, 2 Hour, 6 Hour, 12 Hour or 24 Hour.

Please note that if this function is set to “off” then the time-stamp requests sent to the time server by the Anesthesia System will stop and the CT profile will be disabled.

If the function is set to “on” and a Time Server is not available, the Anesthesia System will try to connect repeatedly according to the configured interval. If the connection attempt fails 5 times in a row, the Anesthesia System will display a “Could not locate time server” prompt message, this prompt message will be displayed until the connection attempt succeeds.

The Port of Time Server is fixed to 123.

UTC Time in System->Time Settings tab shall be used to calculate the time offset.

4 Message Frame

MLLP is the Minimal Lower Layer Protocol which is used by HL7 for delimiting the start and end of a message.And there are two kinds of message frame.

4.1 RS-232 frame

- The frame of an MLLP message for RS-232 is:

  <SB> + <Message> + <CRC> + <EB> + <CR>

Where:

<SB> = Start Block (0x0B (VT))

<Message> = Optimized IHE-PCD HL7 Message

<EB> = End Block (0x1C (FS))

<CR> = Carriage return (0x0D (CR))

<CRC> = 16 bit CRC in 4 ASCII characters (see Appendix A).

- A 16-bit CRC checksum of the message content (not including the MLLP framing information (SB, EB, and CR)) is appended at the end of any message. For more information refer to Appendix A.
- A typical message will look like:

4.2 Ethernet frame

- The Ethernet protocol has a built in CRC check so that each message does not need any application level checking for transmission errors.
- The frame of an MLLP message for Ethernet is:

  <SB> + <Message> + <EB> + <CR>

Where:

5 A Series Export Protocol

5.1 DEC Profile: Unsolicited Results

The A Series supports sending unsolicited results at a 10 second interval. Shorter or longer intervals are allowed by configuration. The Device Observation Reporter (DOR) (Mindray device) will continue to send unsolicited results at its configured interval independent of whether or not an ACK was received from the Device Observation Consumer (DOC). In Serial Port mode, the Ack (see Figure below) is not expected.

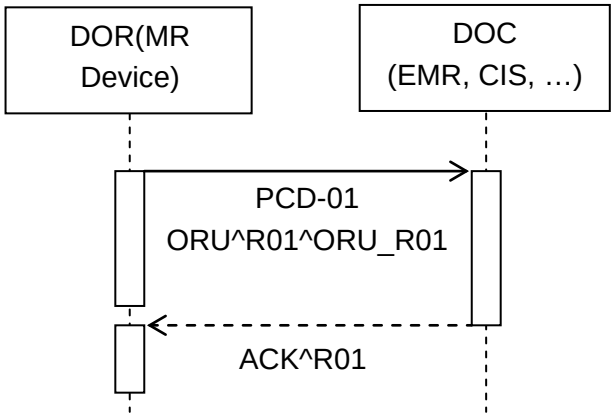

Unsolicited Results sequence Diagram

5.1.1 Supported Transmission Data

The Mindray anesthesia system acts in the role of a DOR in the IHE PCD DEC Profile architecture. It transmits the working data (measurements, settings, vent modes, status, etc.) periodically to the DOC (receiver). Please refer to Appendix B to get more details.

5.1.1.1 Notes

In Standby mode, the A Series anesthesia system does not send any ventilation information such as: ventilation mode, ventilation parameter measurements or settings.

In ACGO mode, Manual mode or Auto Ventilation Non-Functional state ventilation parameter settings are not sent. ACGO mode is used on the A7 only.

The A Series anesthesia system will not send the parameters generated by an external or internal AG module unless they are connected. The external AG module is an optional configuration for the A5 and a standard configuration for the A7. The internal AG module is only on the A7.

The actual agent measurements are only sent when the external AG module is connected and the system is not in Standby mode. The external AG module is an optional configuration for the A5 and a standard configuration for the A7.

In all modes, all five of the cumulative agent usage values are sent when the internal AG module is connected. The internal AG module is only on the A7.

When the A Series anesthesia system is working in ACGO or Monitor mode, it will not send the Rate that is measured by the ventilator (VCM). It will send the Rate that is measured by AG module if the external AG module is connected. Monitor mode is an optional configuration for the A5 and a standard configuration for the A7. ACGO mode is used on the A7 only.

When the A Series anesthesia system is in Auto Ventilation Non-Functional state, the measured parameters from the external AG module are still sent. The external AG module is an optional configuration for the A5 and a standard configuration for the A7.

The A Series anesthesia system will send out fresh gas flow setting parameters only when the EFCS is in use. EFCS is the Electronic Fresh Gas System used on A7 only. This is the standard method to control flow on the A7 anesthesia system. The desired flow is set by the user and proportional valves will achieve the set flow

The A Series anesthesia system will send out fresh gas flow measured parameters except when the BFCS is in use. BFCS is the backup fresh gas system used on the A7 only. This is the backup method to control flow on the anesthesia system. The flow cannot be preset to a particular value, the flow is increased or decreased by the user by turning mechanical valves.

5.2 Message Details: Observation and Waveform Data

This message is made up of a number of segments as follows:

MSH Segment - Message Header

PID Segment - Patient Identifier

PV1 Segment - Patient Visit

Observation Block OBR Segment - Observation Request

Observation Block OBX Segment - Observation Results

Waveform Block OBR Segment - Observation Request

Waveform Block OBX Segment - Observation Results

Table 1 Data Message Structure

Segment	Meaning	Usage	Cardinality
MSH	Message Header	R	[1..1]
{	--- PATIENT RESULT begin	R	[1..1]
[	--- PATIENT begin		
PID	Patient Identification	R	[1..1]
[	--- VISIT begin		
PV1	Patient Visit	R	[1..1]
]	--- VISIT end		
]	--- PATIENT end		
{	--- ORDER_OBSERVATION begin	R	[0..1]
OBR	Observation Request	R	[1..1]
{	--- OBSERVATION begin	R	[1..N]
OBX	Observation Result	R	[1..1]
}	--- OBSERVATION end		
OBR	Wave Observation Request	R	[0..1]
{	--- WAVE OBSERVATION begin	R	[1..N]
OBX	Waveform Observation Result	R	[1..1]
}	--- WAVE OBSERVATION end		
}	--- ORDER_OBSERVATION end		
}	--- PATIENT RESULT end		

5.2.1 MSH Segment

The MSH segment defines the intent, source, destination, and some specifics of the syntax of a message.

MSH Segment definition:

Field	Name	Mindray Usage	
MSH-1	Field Separator	R	“|”
MSH-2	Encoding Characters	R	“^~\&”
MSH-3	Sending Application	R	
MSH-3.1	Namespace ID	R	See Table 2 for values
MSH-3.2	Universal ID	R	“00A037” + 4 digit MR device ID + last six digits of serial number in Hex See Table 2 MR device ID values
MSH-3.3	Universal ID Type	R	“EUI-64”
MSH-4	Sending Facility	RE	Facility entered on the device
MSH-5	Receiving Application	X	EMPTY
MSH-6	Receiving Facility	X	EMPTY
MSH-7	Date/Time of Message	R	YYYY[MM[DD[HH[MM[SS]]]]] [+/-ZZZZ]
MSH-9	Message Type	R	
MSH-9.1	Message Code	R	”ORU”
MSH-9.2	Trigger Event	R	”R01”
MSH-9.3	Message Structure	R	”ORU_R01”
MSH-10	Message Control Id	R	An integer that is unique to each message.
MSH-11	Processing Id	R	
MSH-11.1	Processing ID	R	“P”
MSH-11.2	Processing Mode	X	EMPTY
MSH-12	Version ID	R	“2.6”
MSH-13	Sequence Number	X	EMPTY
MSH-14	Continuation Pointer	X	EMPTY
MSH-15	Accept Acknowledgment Type	R	“AL”
MSH-16	Application Acknowledgment Type	R	“NE”
MSH-17	Country Code	X	EMPTY

Field	Name	Mindray Usage	
MSH-18	Character Set	RE	“UNICODE UTF-8”
MSH-19	Principal Language Of Message	X	EMPTY
MSH-20	Alternate Character Set Handling Scheme	X	EMPTY
MSH-21	Message Profile Identifier	R	
MSH-21.1	Entity Identifier	R	“IHE_PCD_001”
MSH-21.2	Namespace ID	RE	“IHE PCD”
MSH-21.3	Universal ID	RE	“1.3.6.1.4.1.19376.1.6.1.1.1“
MSH-21.4	Universal ID Type	RE	”ISO”

Note: Fields that are not used are omitted for brevity.

Field	Name	Mindray Usage	
PID-5.1	Family Name	O	Last Name entered on the device
PID-5.2	Given Name	O	First Name entered on the device
PID-5.3	Second and Further Given Names	X	EMPTY
PID-5.4	Suffix	X	EMPTY
PID-5.5	Prefix	X	EMPTY
PID-5.7	Name Type Code	R	“L”
PID-5.8	Name Representation Code	X	EMPTY
PID-6	Mother’s Maiden Name	X	EMPTY
PID-7	Date/Time of Birth	RE	DOB entered on the device (YYYY[MM[DD]])
PID-8	Administrative Sex	RE	See Table 3 below

Table 3 Administrative Sex Value

Value	Gender
<blank>	Unspecified
M	Male
F	Female
U	Unknown

Note: Fields that are not used are omitted for brevity.

5.2.3 PV1 Segment

The PV1 segment is used to communicate information on an account or visit-specific basis.

PV1 Segment Definition:

Field	Name	Mindray Usage	
PV1-2	Patient Class	R	“I”
PV1-3	Assigned Location	RE	
PV1-3.1	Point of Care	RE	Point of Care entered on the device
PV1-3.2	Room	RE	Room entered on the device

Mindray Usage
device
the device

ity.

nt

date and time of the OBX segments

Mindray Usage
cremented for each OBR in the message.

U

5.2.5 Observation Block OBX Segment

- The OBX segment is used to transmit a single observation or observation fragment. It represents the smallest indivisible unit of a report.
- OBX Segment Definition:

Field	Name	Mindray Usage	
OBX-1	Set ID-OBX	R	An integer that is incremented for each OBX in the OBR block, starting at 1
OBX-2	Value Type	CE	“SN”, “NM”, “ST” or “CNE
OBX-3	Observation Identifier	R2	C EC E

Please Note:

The OBX-11 field will be filled in with 'R' for unconfirmed observations. These are observations that are machine measured and not confirmed by a clinician. Values confirmed by a clinician will be filled in with an 'F'. An example of this would be weight since it is entered by the clinician. When sending an invalid value, the A Series will set the OBX-2 "Observation Type" and OBX-5 "Observation Value" blank, OBX-8 to "INV", and OBX-11 to "X".

The OBX-2 field shall be populated using the values found in the table below. It is used to identify the data type of the OBX-5 field.

Value	HL7 Data Type	Observation Type
NM	Numerical Value	Integer Value Decimal Value
ST	String Value	String Value
SN	Structured Numeric	Ratios
CNE	Coded, No Exceptions	Enumerations
<Blank>	N/A	Any Invalid Value

5.2.6 Waveform Block OBR Segment

The Waveform Block OBR segment is used to transmit a date and time of the Waveform Block OBX segments which follow.

Waveform Block OBR Segment Definition:

Field	Name	Mindray Usage	
OBR-1	Set ID OBR	R	An integer that is incremented for each OBR in the message.
OBR-2	Placer Order Number	C	EMPTY
OBR-3	Filler Order Number	R	
OBR-3.1	Entity identifier	R	Same as MSH-10
OBR-3.2	Namespace ID	R	Same as MSH-3.1
OBR-3.3	Universal ID	R	Same as MSH-3.2
OBR-3.4	Universal ID Type	R	”EUI-64”

Field	Name	Mindray Usage	
OBR-4	Universal Service Identifier	R	“CONTINUOUS WAVEFORM”
OBR-7	Observation Date/Time Start Time	R	YYYY[MM[DD[HH[MM[SSmmm]]]]] [+/-ZZZZ]
OBR-8	Observation Date/Time End Time	R	YYYY[MM[DD[HH[MM[SSmmm]]]]] [+/-ZZZZ]

5.2.7 Waveform Block OBX Segment

5.2.7.1 Notes on the OBX-4 Sub-ID

OBX-4 for the waveform data OBX segment follows the standard IHE format of M.V.C.I, where M = System, V = Virtual Device, V = Channel, I = Metric. I is set to the OBX-3.1 value for the parameter. The following OBXs in the message that contain specifications for the waveform data follow the format of M.V.C.I.F, where F is an incrementing integer for each new OBX. The M.V.C.I component is identical to the value in the waveform data OBX. This allows the specifications to be associated with the waveform data OBX.

5.2.7.2 Waveform OBX segment, Waveform Data

This OBX specifies the data samples for the waveform.

Field	Name	Mindray Usage	
OBX-1	Set ID-OBX	R	An integer that is incremented for each OBX in the OBR block, starting at 1
OBX-2	Value Type	R	“NA”
OBX-3	Observation Identifier	R	The code for the waveform. See Table 20 for values.
OBX-4	Observation Sub-ID	R	The containment value. See section 5.2.7.1 for details.
OBX-5	Observation Value	R	Correct Value
OBX-6	Units	R	“262656^MDC_DIM_DIMLESS^MDC”
OBX-20	Observation Site	RE	Observation site of the waveform

5.2.7.3 Waveform OBX segment, Waveform Sample Rate

This OBX specifies the sample rate for the waveform.

Field	Name	Mindray Usage	
OBX-1	Set ID-OBX	R	An integer that is incremented for each OBX in the OBR block, starting at 1
OBX-2	Value Type	R	“NM”
OBX-3	Observation Identifier	R	“0^MDC_ATTR_SAMP_RATE^MDC”

Field	Name	Mindray Usage	
OBX-1	Set ID-OBX	R	An integer that is incremented for each OBX in the OBR block, starting at 1
OBX-2	Value Type	R	“CWE”
OBX-3	Observation Identifier	R	“0^MDC_ATTR_EVENT^MDC”
OBX-4	Observation Sub-ID	R	The containment value. See section 5.2.7.1 for details.
OBX-5	Observation Value	R	The code representing the event type. See Table 4 for values.
OBX-14	Observation Date/Time	RE	YYYY[MM[DD[HH[MM[SSmmm]]]]] [+/-ZZZZ]

Table 4 Waveform Event Codes

Event	Value		
	Code	Text	Coding System
Start of Spontaneous Breath	30903	MNDRY_EVT_SPONT_BREATH_START	99MNDRY
End of Spontaneous Breath	30904	MNDRY_EVT_SPONT_BREATH_END	99MNDRY

5.3 Message Details: Alert Data

The Alert message is used to transmit alert information from the A-Series.

Table 5 Alert Message Structure

Segment	Meaning	Usage	Cardinality
MSH	Message Header	R	[1..1]
{	--- ALERT_begin	R	[1..1]
[	--- PATIENT begin		
PID	Patient Identification	R	[1..1]
[	--- LOCATION begin		
PV1	Alert Location	R	[1..1]
]	--- LOCATION end		
]	--- PATIENT end		
{	--- ALERT_IDENTIFICATION begin		[1..1]
OBR	Alert Identification	R	[1..1]
{	--- ALERT_OBSERVATION begin	R	[1..7]
OBX	Alert specification	R	[1..1]
}	--- ALERT OBSERVATION end		
}	--- ALERT_IDENTIFICATION end		
}	--- ALERT end		

5.3.1 MSH Segment

Unless otherwise specified this message follows the Mindray's common MSH segment definition defined in the 3.1.1 MSH Segment.

5.3.1.1 MSH-9 Message Type

MSH-9 will be populated with "ORU^R40^ORU_R40" in an Alert Message.

5.3.1.2 Alert OBX segment, Facet 2 Source Identification

MSH-21 will be populated with "IHE_PCD_ACM_001^IHE PCD^1.3.6.1.4.1.19376.1.6.4.4.1^ISO" in an Alert Message.

5.3.2 PID Segment

This message follows the Mindray's common PID segment definition defined in 5.2.2 PID Segment.

5.3.3 PV1 Segment

This message follows the Mindray's common PV1 segment definition defined in 5.2.3 PV1 Segment with the following exceptions: PV1-2 shall be empty.

5.3.4 Alert OBR Segment

The Alert Data Block OBR segment is used to transmit a date and time of the Alert OBR Block OBX segments which follow.

Alert OBR Segment Definition:

Field	Name	Mindray Usage	
OBR-1	Set ID OBR	R	An integer that is incremented for each OBR in the message.
OBR-2	Placer Order Number	X	EMPTY
OBR-3	Filler Order Number	R	
OBR-3.1	Entity identifier	R	Same as MSH-10
OBR-3.2	Namespace ID	R	Same as MSH-3.1
OBR-3.3	Universal ID	R	Same as MSH-3.2
OBR-3.4	Universal ID Type	R	Same as MSH-3.3
OBR-4	Universal Service Identifier	R	“196616^MDC_EVT_ALARM^MDC”

Note 1:

x

For only a high limit the format is “<H”, where H is the high limit. For example with only a high limit of 120 the value would be:

```
<120
```

For only a low limit the format is “>L”, where L is the low limit. For example with only a low limit of 30 the value would be:

```
>30
```

Non-Threshold Alerts

Field	Name	Mindray Usage	
OBX-1	Set ID-OBX	R	An integer that is incremented for each OBX in the OBR block, starting at 1
OBX-2	Value Type	R	“CWE”
OBX-3	Observation Identifier	R	“68480^MDC_ATTR_ALERT_SOURCE^MDC”
OBX-4	Observation Sub-ID	R	The containment value of the alert appended with “.2” Refer to Appendix B fo containment values.
OBX-5	Observation Value	R	“70041^MDC_DEV_SYS_ANESTH_MDS^MDC”
OBX-11	Observation Result Status	R	“F”

5.3.5.3 Alert OBX segment, Facet 3 Event Phase

This OBX specifies the phase of the alert event.

Field	Name	Mindray Usage	
OBX-1	Set ID-OBX	R	An integer that is incremented for each OBX in the OBR block, starting at 1
OBX-2	Value Type	R	“ST”
OBX-3	Observation Identifier	R	“68481^MDC_ATTR_EVENT_PHASE^MDC”
OBX-4	Observation Sub-ID	R	The containment value of the alert appended with “.3” Refer to Appendix B fo containment values.
OBX-5	Observation Value	R	See 6 below
OBX-11	Observation Result Status	R	“F”

Table 6 Alert Phases

Value	Phase
tpoint	The alert is a time point with no duration. This will be the only event for this alert.
start	The alert started. Transitioned to active.

Value	Phase
continue	The message is not a transition, it is just a resend of the current event state
end	The alert has ended. Transitioned from active to inactive or latched.
update	A change other than a state transition in a previously reported alarm, such as a further change in an out-of-limit metric.
escalate	The alert has escalated in priority.
de-escalate	The alert has de-escalated in priority.
reset	The alert was reset. Transitioned from latched to inactive.
inactivation	The inactivation state has changed (audio pause, alarm pause, etc…).

5.3.5.4 Alert OBX segment, Facet 4 Alarm State

This OBX specifies the state of the alert.

Field	Name	Mindray Usage	
OBX-1	Set ID-OBX	R	An integer that is incremented for each OBX in the OBR block, starting at 1
OBX-2	Value Type	R	“ST”
OBX-3	Observation Identifier	R	“68482^MDC_ATTR_ALARM_STATE^MDC”
OBX-4	Observation Sub-ID	R	The containment value of the alert appended with “.4” Refer to Appendix B for containment values.
OBX-5	Observation Value	R	See Table 7 below
OBX-11	Observation Result Status	R	“F”

Table 7 Alert States

Value	State
inactive	The alarm is inactive. The alarm condition does not exist and the alarm system does not have an associated alarm.
active	The alarm is active. The alarm condition exists and the alarm system has an associated active alarm.
latched	The alarm is latched. The alarm condition is gone but the alarm system is keeping the associated alarm active.

1
3 for
10 Td ((S)-2.2(e5 5.16X

5.3.5.6 Alert OBX segment, Facet 6 Alarm Priority

This OBX specifies the alarm priority.

Field	Name	Mindray Usage Network Port	
OBX-1	Set ID-OBX	R	An integer that is incremented for each OBX in the OBR block, starting at 1
OBX-2	Value Type	R	“ST”
OBX-3	Observation Identifier	R	“68484^MDC_ATTR_ALARM_PRIORITY^MDC”
OBX-4	Observation Sub-ID	R	The containment value of the alert appended with “.6” Refer to Appendix B for containment values.
OBX-5	Observation Value	R	See Table 11 below
OBX-11	Observation Result Status	R	“F”

Table 11 Alarm Priority

Value	Alarm Priority
PN	No alarm
PL	Low priority
PM	Medium priority
PH	High priority

Table 12 Facet 6 and 7 Values Based on Alert Type

Alert Type	Facet 6 OBX-5	Facet 7 OBX-5
High Priority Physiological	PH	SP

Me

5.3.5.7 Alert OBX segment, Facet 7 Alert Type

This OBX specifies the alert type.

Field	Name	Mindray Usage	
OBX-1	Set ID-OBX	R	An integer that is incremented for each OBX in the OBR block, starting at 1
OBX-2	Value Type	R	“ST”
OBX-3	Observation Identifer	R	“68485^MDC_ATTR_ALERT_TYPE^MDC”
OBX-4	Observation Sub-ID	R	The containment value of the alert appended with “.7” Refer to Appendix B fo containment values.
OBX-5	Observation Value	R	See Table 13 below
OBX-11	Observation Result Status	R	“F”

Table 13 Alarm Type

Value	Alarm Type
SP	Physiological
ST	Technical
SA	Advisory

6 Time Synchronization

6.1 CT (Consistent Time) Profile:

The A Series device supports the IHE Consistent Time (CT) Profile (ITI-01) only on the Ethernet port.

This profile supports the synchronization of time between a Time Server and a Time Client and is based on the IETF standard SNTP protocol. The Time Client periodically transmits synchronization request (using UDP) to the Time Server. The request interval as well as IP Address of the Time Server is configured on the Anesthesia System.

The A Series anesthesia machines play a Time Client role in the IHE CT profile.

If a Time Server is not available then the Anesthesia System will try to connect again after the configured interval. If the connection attempt fails 5 times in a row, the Anesthesia System will display a “Could not locate time server” prompt message. This prompt message will be displayed until the connection attempt succeeds.

IHE ITI Time Client application system architecture:

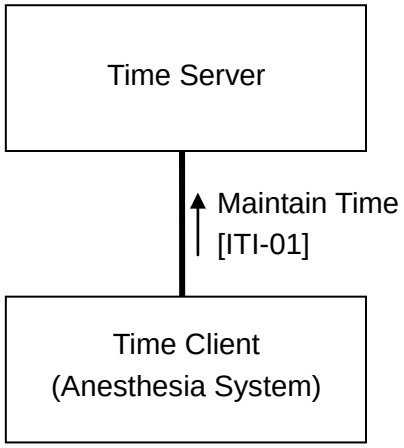

6.2 Introduction to the SNTP Protocol

As mentioned previously, when the Network Port is used the A Series can use the IHE Consistent Time (CT) profile to obtain system time. This profile uses SNTP which is simple network protocol based on RFC 2030. It uses the same protocol as NTP except the unique difference that SNTP does not include measurement data which the NTP high-accuracy data estimation algorithm uses. The SNTP protocol is applicable to hosts which do not require a full implementation of the NTP complex algorithm. SNTP is a subset of NTP, it uses UDP protocol with “well-known” port of 123.

The Mindray anesthesia system acts as a Client in this Client/Server system, however it does initiate the requests to the server. The message format is as follows:

0	7	15	23	31
LI	VN	Mode	Stratum	Poll Interval	Precision
Root Delay (32)					
Root Dispersion (32)					
Reference Identifier (32)					
Reference Timestamp (64)					
Originate Timestamp (64)					
Receive Timestamp (64)					
Transmit Timestamp (64)					

For a definition of each field in an SNTP message, refer to “RFC 2030 Simple Network Protocol”.

6.2.1 UDP Layer

The figure below shows the Network communication layers involved in the communication between Mindray anesthesia systems and communication partners.

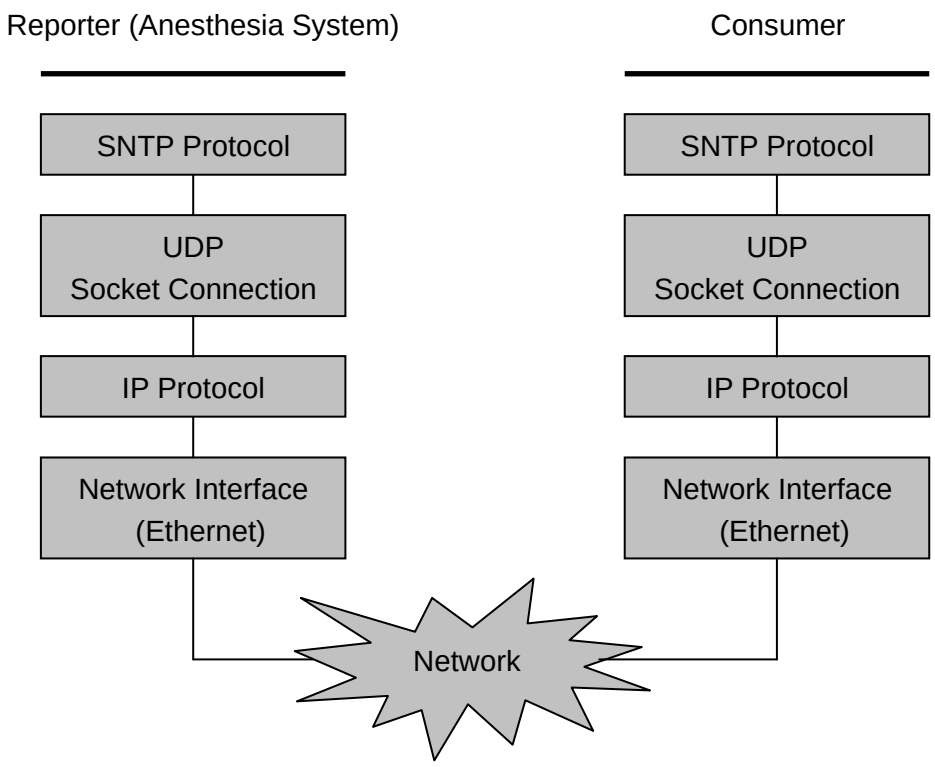

Communication Architecture (CT Profile)

Corresponding to “UDP” layer in the Communication Architecture (CT Profile).

- Connectionless Socket Service
- Use TCP/IP stack protocol
- Ethernet driver interface
- All networking information (IP address, Subnet, Gateway) is entered by the user manually

6.2.2 Packet Assembly

SNTP data format that SNTP contains 48 bytes which are divided into five parts: SNTP header, time stamp T1, time stamp T2, time stamp T3, and time stamp T4.

Header information: configuration information of the current sender

- T1: time point when Client sends a request
- T2: time point when Server receives the request

T3: time point when Server sends a response

T4: time point when Client receives the response

As Client, Mindray anesthesia system only sends request packets. The request packet mainly contains header information and T1 time stamp. The following gives an example of a completed request packet.

0	7	15	23	31	
00	011	011	00000000	000000000	00000000
0x00000000					
0x00000000					
0x00000000					
0x00000000 0x00000000					
0x00000000 0x00000000					
0x00000000 0x00000000					
0xD0C2D77D 0x00000000					

Note: 0xD0C2D77D represent the UTC time of 2010-12-27 9 :14 :37.

After receiving this message, the Time Server fills T2 time stamp and T3 time stamp. Then it sends the assembled new data packet back to the Client for time synchronization to the master clock.

6.2.3 SNTP C/S Illustration

CT client work illustration:

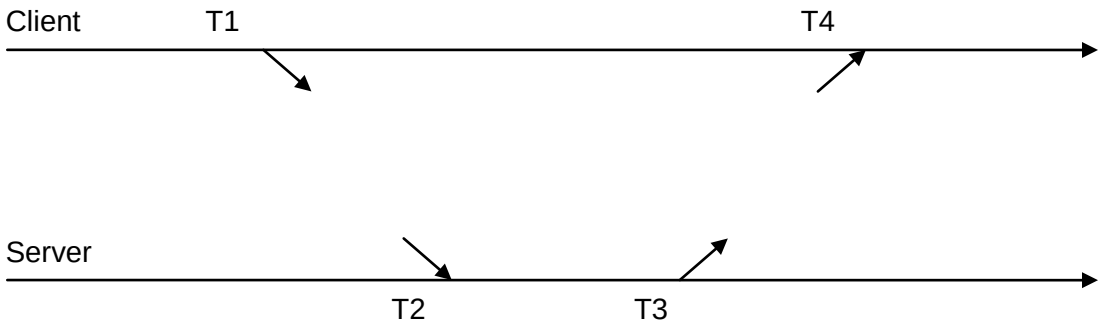

Note: for time calibration algorithm, refer to "RFC 2030 Simple Network Protocol"

A CRC Calculation

A.1 Overview

As depicted in section 2.1.1.1 the Serial Protocol uses a CRC based on the IETF RFC 1171 for HDLC framing. The CRC is calculated to 16 bits on the HL7 message and does not include the MLLP framing characters. It is inserted towards the end of the Serial export message using 4 ASCII characters in Hex. For example if the CRC is 0x1F2Eh, the CRC is inserted as 1F2E.

A.2 CRC Calculation Guidance

Below is a C++ class for reference that performs the CRC based on the IETF RFC 1171 for HDLC framing. It can easily be converted into a C function if needed.

```
class CRC
{
    private:
        static unsigned short s_CRCTable[256];
        unsigned short m_Value;

    public:
        CRC():m_Value(0){}
        unsigned short GetValue() const { return m_Value;}
        void Reset() {m_Value = 0;}
        void Calculate( const unsigned char* data, size_t length);
};


const unsinged short CRC::s_CRCTable[256] =
{
0x0000, 0x1189, 0x2312, 0x329b, 0x4624, 0x57ad, 0x6536, 0x74bf,
0x8c48, 0x9dc1, 0xaf5a, 0xbed3, 0xca6c, 0xdbe5, 0xe97e, 0xf8f7,
0x1081, 0x0108, 0x3393, 0x221a, 0x56a5, 0x472c, 0x75b7, 0x643e,
0x9cc9, 0x8d40, 0xbfdb, 0xae52, 0xdaed, 0xcb64, 0xf9ff, 0xe876,
0x2102, 0x308b, 0x0210, 0x1399, 0x6726, 0x76af, 0x4434, 0x55bd,
0xad4a, 0xbcc3, 0x8e58, 0x9fd1, 0xeb6e, 0xfae7, 0xc87c, 0xd9f5,
0x3183, 0x200a, 0x1291, 0x0318, 0x77a7, 0x662e, 0x54b5, 0x453c,
0xbdcb, 0xac42, 0x9ed9, 0x8f50, 0xfbef, 0xea66, 0xd8fd, 0xc974,
0x4204, 0x538d, 0x6116, 0x709f, 0x0420, 0x15a9, 0x2732, 0x36bb,
```

```
0xce4c, 0xdfc5, 0xed5e, 0xfcd7, 0x8868, 0x99e1, 0xab7a, 0xbaf3,
0x5285, 0x430c, 0x7197, 0x601e, 0x14a1, 0x0528, 0x37b3, 0x263a,
0xdecd, 0xcf44, 0xfddf, 0xec56, 0x98e9, 0x8960, 0xbbfb, 0xaa72,
0x6306, 0x728f, 0x4014, 0x519d, 0x2522, 0x34ab, 0x0630, 0x17b9,
0xef4e, 0xfec7, 0xcc5c, 0xddd5, 0xa96a, 0xb8e3, 0x8a78, 0x9bf1,
0x7387, 0x620e, 0x5095, 0x411c, 0x35a3, 0x242a, 0x16b1, 0x0738,
0xffcf, 0xee46, 0xdcdd, 0xcd54, 0xb9eb, 0xa862, 0x9af9, 0x8b70,
0x8408, 0x9581, 0xa71a, 0xb693, 0xc22c, 0xd3a5, 0xe13e, 0xf0b7,
0x0840, 0x19c9, 0x2b52, 0x3adb, 0x4e64, 0x5fed, 0x6d76, 0x7cff,
0x9489, 0x8500, 0xb79b, 0xa612, 0xd2ad, 0xc324, 0xf1bf, 0xe036,
0x18c1, 0x0948, 0x3bd3, 0x2a5a, 0x5ee5, 0x4f6c, 0x7df7, 0x6c7e,
0xa50a, 0xb483, 0x8618, 0x9791, 0xe32e, 0xf2a7, 0xc03c, 0xd1b5,
0x2942, 0x38cb, 0x0a50, 0x1bd9, 0x6f66, 0x7eef, 0x4c74, 0x5dfd,
0xb58b, 0xa402, 0x9699, 0x8710, 0xf3af, 0xe226, 0xd0bd, 0xc134,
0x39c3, 0x284a, 0x1ad1, 0x0b58, 0x7fe7, 0x6e6e, 0x5cf5, 0x4d7c,
0xc60c, 0xd785, 0xe51e, 0xf497, 0x8028, 0x91a1, 0xa33a, 0xb2b3,
0x4a44, 0x5bcd, 0x6956, 0x78df, 0x0c60, 0x1de9, 0x2f72, 0x3efb,
0xd68d, 0xc704, 0xf59f, 0xe416, 0x90a9, 0x8120, 0xb3bb, 0xa232,
0x5ac5, 0x4b4c, 0x79d7, 0x685e, 0x1ce1, 0x0d68, 0x3ff3, 0x2e7a,
0xe70e, 0xf687, 0xc41c, 0xd595, 0xa12a, 0xb0a3, 0x8238, 0x93b1,
0x6b46, 0x7acf, 0x4854, 0x59dd, 0x2d62, 0x3ceb, 0x0e70, 0x1ff9,
0xf78f, 0xe606, 0xd49d, 0xc514, 0xb1ab, 0xa022, 0x92b9, 0x8330,
0x7bc7, 0x6a4e, 0x58d5, 0x495c, 0x3de3, 0x2c6a, 0x1ef1, 0x0f78
};


void UInt16FCS::Calculate( const unsigned char* data, size_t length)
{
    const unsigned char* endPtr = data + length;
    while(data < endPtr)
      m_Value = (m_Value >> 8) ^ s_CRCTable[(m_Value ^ *data++) &
0xff];
}
```

B A-Series HL7 Export Nomenclature

B.1 General ID Allocation Scheme for “99MNDRY”

Terms

Wherever possible Standards based 11073-10101 terms have been used. These are denoted by “MDC” as OBX 3.3. In situations where terms were not yet available we have developed a private code space which is denoted by “99MNDRY”.

Range	Purpose
00000 – 09999	Measurements
10000 – 19999	Units of Measure (UoM)
20000 – 29999	Settings
30000 – 39999	Status
40000 – 49999	Body Sites
50000 – 59999	Modes

B.2 A Series - Anesthesia Machine Containment Tree

Anesthesia System Containment Tree

Hierarchy					Containment (M.V.C.I)
MDS	Anesthesia System			1	1
	VMD	Anesthesia System		1	1.1
		Channel	Status	1	1.1.1
	VMD	Body Measurement		2	1.2
		Channel	Measurement	1	1.2.1
	VMD	Ventilator		3	1.3
		Channel	Status	1	1.3.1
		Channel	Ventilation	2	1.3.2
		Channel	Fresh Gas	3	1.3.3

B.4 Ventilator / Anesthesia Machine Settings IDs

Only settings that are valid for a specific device mode will be sent.

MDC_FLOW_O2_FG_SETTING	MDC	l/min	1.3.3.16930372	Fresh Gas	/
MDC_FLOW_N2O_FG_SETTING	MDC	l/min	1.3.3.16930308	Fresh Gas	/

Setting	OBX-3.1	OBX-3.2	OBX-3.3	UoM	OBX-4	Module	Comment
AIR Flow	16930092	MDC_FLOW_AIR_FG_SETTING	MDC	l/min	1.3.3. 16930092	Fresh Gas	/

B.5 Ventilation Modes

Parameter	OBX-3.1	OBX-3.2	OBX-3.3	UoM	OBX-4	Module	Values
Mode	184352	MDC_VENT_MODE	MDC	Unitless	1.3.1.184352	Vent	See Table 15

Table 15 Ventilation Mode Values

Mode	OBX-5.1	OBX-5.2	OBX-5.3	Description
Manual	50000	MNDRY_VENT_MODE_MANUAL	99MNDRY	Manual Ventilation
ACGO	50001	MNDRY_VENT_MODE _ACGO	99MNDRY	Auxiliary Common Gas Outlet
Manual + Alarms Off	50002	MNDRY_VENT_MODE_MANUAL_PLUS_ALM_OFF	99MNDRY	Manual Ventilation with Alarms Of
Manual + Bypass	50003	MNDRY_VENT_MODE_MANUAL_PLUS_BYPASS	99MNDRY	Cardiac Bypass
Manual + Monitor	50004	MNDRY_VENT_MODE_MANUAL_PLUS_MONITOR	99MNDRY	Monitor with AG module
VCV	50005	MNDRY_VENT_MODE_VCV	99MNDRY	Volume Control Ventilation
PS	50006	MNDRY_VENT_MODE_PS	99MNDRY	Pressure Support
SIMV-VC	50007	MNDRY_VENT_MODE_SIMVVC	99MNDRY	Synchronized Intermittent Mandatory Ventilation-Volume Control
SIMV-VC + PS	50008	MNDRY_VENT_MODE_SIMVVC_PLUS_PS	99MNDRY	Synchronized Intermittent Mandatory Ventilation-Volume Control with Pressure Support.
SIMV-PC	50009	MNDRY_VENT_MODE_SIMVPC	99MNDRY	Synchronized Intermittent Mandatory Ventilation-Pressure Control
SIMV-PC + PS	50010	MNDRY_VENT_MODE_SIMVPC_PLUS_PS	99MNDRY	

Mode	OBX-5.1	OBX-5.2	OBX-5.3	Description
				Volume Guarantee
AVNF	50013	MNDRY_MODE_AVNF	99MNDRY	Auto-Ventilation Non-Functional

B.6 System Status

Parameter	OBX-3.1	OBX-3.2	OBX-3.3	UoM	OBX-4	Module	Values
Device Status	202886	MDC_EVT_STAT_DEV	MDC	Unitless	1.1.1. 202886	System	See Table 16
Device Mode	30002	MNDRY_EVT_STAT_MODE_DEV	99MNDRY	Unitless	1.1.1.30002	System	See Table 17
Patient Type	30005	MNDRY_EVT_PATIENT_TYPE	99MNDRY	Unitless	1.1.1.30005	System	See Table 18
Warmer On	30007	MNDRY_EVT_STAT_WARMER_ON_BOOL	99MNDRY	Unitless	1.3.1.30007	Warmer	See Table 19

Table 16 Device Status Values

Device Status	OBX-5.1	OBX-5.2	OBX-5.3	Comment
Off	202834	MDC_EVT_STAT_OFF	MDC	Device is off. Sent (if possible) during power down sequence
Running	202902	MDC_EVT_STAT_RUNNING	MDC	Device is running.
Standby/ Discharge	202836	MDC_EVT_STAT_STANDBY	MDC	Device is in Standby

Table 17 Device Mode Values

Device Mode	OBX-5.1	OBX-5.2	OBX-5.3	Comment
Normal	30003	MNDRY_EVT_STAT_MODE_NORMAL	99MNDRY	Device is normal operating mode.
Service	202840	MDC_EVT_STAT_MODE_TEST	MDC	Device is in service mode.
Demo	30004	MNDRY_EVT_STAT_MODE_DEMO	99MNDRY	Device is in demo mode.

Table 18 Patient Type Values

Patient Type	OBX-5.1	OBX-5.2	OBX-5.3	Comment
Adult	202890	MDC_EVT_STAT_DEV_MODE_ADULT	MDC	Patient is adult size.
Pediatric	202888	MDC_EVT_STAT_DEV_MODE_PEDIATRIC	MDC	Patient is adult pediatric.
Infant	30006	MNDRY_EVT_STAT_DEV_MODE_INFANT	99MNDRY	Patient is adult infant.

Table 19 Boolean Type Values

Value	OBX-5.1	OBX-5.2	OBX-5.3	Comment
True	30000	MDC_TRUE	99MNDRY	Condition is true.
False	30001	MDC_FALSE	99MNDRY	Condition is false.

B.7 Patient Measurements

Parameter	OBX-3.1	OBX-3.2	OBX-3.3	UoM	OBX-4	Module	Comment
Weight	188736	MDC_MASS_BODY_ACTUAL	MDC	kg	1.2.1.188736	System	

B.8 Ventilator / Anesthesia Machine Measurement IDs

Parameter	OBX-3.1	OBX-3.2	OBX-3.3	UoM	OBX-4	Module	Comment
I:E	151832	MDC_RATIO_IE	MDC	Unitless	1.3.2.151832	Vent.	HL7 SN Type
Peak	151793	MDC_PRESS_AWAY_MAX	MDC	cmH2O	1.3.2.151793	Vent.	/
Mean	151819	MDC_PRESS_AWAY_INSP_MEAN	MDC	cmH2O	1.3.2.151819	Vent.	/
Plat	151784	MDC_PRESS_RESP_PLAT	MDC	cmH2O	1.3.2.151784	Vent.	/
PEEP	151976	MDC_VENT_PRESS_AWAY_END_EXP_POS	MDC	cmH2O	1.3.2.151976	Vent.	/
MV	151880	MDC_VOL_MINUTE_AWAY	MDC	l/min	1.3.2.151880	Vent.	/
Vt	151868	MDC_VOL_AWAY_TIDAL	MDC	ml	1.3.2.151868	Vent.	/
Rate	151570	MDC_AWAY_RESP_RATE	MDC	rpm	1.3.2.151570	Vent.	/
R	151840	MDC_RES_AWAY	MDC	cmH20/l/s	1.3.2.151840	Vent.	/
C	151688	MDC_COMPL_LUNG	MDC	ml/cmH20	1.3.2.151688	Vent.	/
O2 Flow	153156	MDC_FLOW_O2_FG	MDC	l/min	1.3.3.153156	Fresh Gas	/
N2O Flow	153092	MDC_FLOW_N2O_FG	MDC	l/min	1.3.3.153092	Fresh Gas	/
AIR Flow	152876	MDC_FLOW_AIR_FG	MDC	l/min	1.3.3.152876	Fresh Gas	/

B.9 Airway Gas Analyzer Measurement IDs

Parameter	OBX-3.1	OBX-3.2	OBX-3.3	UoM	OBX-4	Module	Comment
EtO2	152440	MDC_CONC_AWAY_O2_ET	MDC	%	1.4.1.152440	AG	Exp O2
FiO2	152196	MDC_CONC_AWAY_O2_INSP	MDC	%	1.4.1.152196	AG	FiO2 in A3/A5; Insp O2 in A7
EtCO2	151708	MDC_CONC_AWAY_CO2_ET	MDC	mmHg	1.4.1.151708	AG	EtCO2
FiCO2	151716	MDC_CONC_AWAY_CO2_INSP	MDC	mmHg	1.4.1.151716	AG	FiCO2
Rate	151594	MDC_CO2_RESP_RATE	MDC	rpm	1.4.1.151594	AG	Resp Rate from CO2
EtN2O	152108	MDC_CONC_AWAY_N2O_ET	MDC	%	1.4.1.152108	AG	Exp N2O
FiN2O	152192	MDC_CONC_AWAY_N2O_INSP	MDC	%	1.4.1.152192	AG	Insp N2O
EtAA	152460	MDC_CONC_AWAY_AGENT_ET	MDC	%	1.4.1.152460	AG	Exp Agent .
FiAA	152464	MDC_CONC_AWAY_AGENT_INSP	MDC	%	1.4.1.152464	AG	Insp Agent
EtHal	152092	MDC_CONC_AWAY_HALOTH_ET	MDC	%	1.4.1.152092	AG	Exp Hal .
FiHal	152176	MDC_CONC_AWAY_HALOTH_INSP	MDC	%	1.4.1.152176	AG	Insp Hal
UsageHal	152932	MDC_VOL_DELIV_HALOTH_LIQUID_CASE	MDC	ml	1.4.1.152932	AG	Hal. usage for case
EtEnf	152088	MDC_CONC_AWAY_ENFL_ET	MDC	%	1.4.1.152088	AG	Exp Enf .
FiEnf	152172	MDC_CONC_AWAY_ENFL_INSP	MDC	%	1.4.1.152172	AG	Insp Enf .
UsageEnf	152916	MDC_VOL_DELIV_ENFL_LIQUID_CASE	MDC	ml	1.4.1.152916	AG	Enf. usage for case
EtIso	152100	MDC_CONC_AWAY_ISOFL_ET	MDC	%	1.4.1.152100	AG	Exp Iso .
FiIso	152184	MDC_CONC_AWAY_ISOFL_INSP	MDC	%	1.4.1.152184	AG	Insp Iso .
UsageIso	152948	MDC_VOL_DELIV_ISOFL_LIQUID_CASE	MDC	ml	1.4.1.152948	AG	Iso. usage for case
EtSev	152096	MDC_CONC_AWAY_SEVOFL_ET	MDC	%	1.4.1.152096	AG	Exp Sev .
FiSev	152180	MDC_CONC_AWAY_SEVOFL_INSP	MDC	%	1.4.1.152180	AG	Insp Sev .

Parameter	OBX-3.1	OBX-3.2	OBX-3.3	UoM	OBX-4	Module	Comment
UsageSev	152980	MDC_VOL_DELIV_SEVOFL_LIQUID_CASE	MDC	ml	1.4.1.152980	AG	Sev. usage fo case
EtDes	152084	MDC_CONC_AWAY_DESFL_ET	MDC	%	1.4.1.152084	AG	Exp Des .
FiDes	152168	MDC_CONC_AWAY_DESFL_INSP	MDC	%	1.4.1.152168	AG	Insp Des .
UsageDes	152900	MDC_VOL_DELIV_DESFL_LIQUID_CASE	MDC	ml	1.4.1.152900	AG	Des. usage for case
MAC	152872	MDC_CONC_MAC	MDC				

Paramete

Alert	OBX-3.1	OBX-3.2	OBX-3.3	OBX-4	Type (P or T)	Threshold (H or L)	Description
$FiCO_2$ Too High	151716	MDC_CONC_AWAY_CO2_INSP	MDC	1.4.1.151716	P	H	$FiCO_2$ is higher than or equal to the high alarm limit setting.
$FiCO_2$ Too Low	151716	MDC_CONC_AWAY_CO2_INSP	MDC	1.4.1.151716	P	L	$FiCO_2$ is lower than or equal to the low alarm limit setting.
EtN_2O Too High	152108	MDC_CONC_AWAY_N2O_ET	MDC	1.4.1.152108	P	H	EtN_2O is higher than or equal to the high alarm limit setting.
EtN_2O Too Low	152108	MDC_CONC_AWAY_N2O_ET	MDC	1.4.1.152108	P	L	EtN_2O is lower than or equal to the low alarm limit setting.
FiN_2O Too High	152192	MDC_CONC_AWAY_N2O_INSP	MDC	1.4.1.152192	P	H	FiN_2O is higher than or equal to the high alarm limit setting.
FiN_2O Too Low	152192	MDC_CONC_AWAY_N2O_INSP	MDC	1.4.1.152192	P	L	FiN_2O is lower than or equal to the low alarm limit setting.
EtO_2 Too High	152440	MDC_CONC_AWAY_O2_ET	MDC	1.4.1.152440	P	H	EtO_2 is higher than or equal to the high alarm limit setting.
EtO_2 Too Low	152440	MDC_CONC_AWAY_O2_ET	MDC	1.4.1.152440	P	L	$EtO_2$is lower than or equal to the low alarm limit setting.
FiO_2 Too High	152196	MDC_CONC_AWAY_O2_INSP	MDC	1.4.1.152196	P	H	FiO_2 is higher than or equal to the high alarm limit setting.
FiO_2 Too Low	152196	MDC_CONC_AWAY_O2_INSP	MDC	1.4.1.152196	P	L	FiO_2 is lower than or equal to the low alarm limit setting.
EtHal Too High	152092	MDC_CONC_AWAY_HALOTH_ET	MDC	1.4.1.152092	P	H	EtHal is higher than or equal to the high alarm limit setting.
EtHal Too Low	152092	MDC_CONC_AWAY_HALOTH_ET	MDC	1.4.1.152092	P	L	EtHal is lower than or equal to the low alarm limit setting.
FiHal Too High	152176	MDC_CONC_AWAY_HALOTH_INSP	MDC	1.4.1.152176	P	H	FiHal is higher than or equal to the high alarm limit setting.

Alert	OBX-3.1	OBX-3.2	OBX-3.3	OBX-4	Type (P or T)	Threshold (H or L)	Description
FiHal Too Low	152176	MDC_CONC_AWAY_HALOTH_INSP	MDC	1.4.1.152176	P	L	FiHal is lower than or equal to the low alarm limit setting.
EtDes Too High	152084	MDC_CONC_AWAY_DESFL_ET	MDC	1.4.1.152084	P	H	EtDes is higher than or equal to the high alarm limit setting.
EtDes Too Low	152084	MDC_CONC_AWAY_DESFL_ET	MDC	1.4.1.152084	P	L	EtDes is lower than or equal to the low alarm limit setting.
FiDes Too High	152168	MDC_CONC_AWAY_DESFL_INSP	MDC	1.4.1.152168	P	H	FiDes is higher than or equal to the high alarm limit setting.
FiDes Too Low	152168	MDC_CONC_AWAY_DESFL_INSP	MDC	1.4.1.152168	P	L	FiDes is lower than or equal to the low alarm limit setting.
EtEnf Too High	152088	MDC_CONC_AWAY_ENFL_ET	MDC	1.4.1.152088	P	H	EtEnf is higher than or equal to the high alarm limit setting.
EtEnf Too Low	152088	MDC_CONC_AWAY_ENFL_ET	MDC	1.4.1.152088	P	L	EtEnf is lower than or equal to the low alarm limit setting.
FiEnf Too High	152172	MDC_CONC_AWAY_ENFL_INSP	MDC	1.4.1.152172	P	H	FiEnf is higher than or equal to the high alarm limit setting.
FiEnf Too Low	152172	MDC_CONC_AWAY_ENFL_INSP	MDC	1.4.1.152172	P	L	FiEnf is lower than or equal to the low alarm limit setting.
EtSev Too High	152096	MDC_CONC_AWAY_SEVOFL_ET	MDC	1.4.1.152096	P	H	EtSev is higher than or equal to the high alarm limit setting.
EtSev Too Low	152096	MDC_CONC_AWAY_SEVOFL_ET	MDC	1.4.1.152096	P	L	EtSev is lower than or equal to the low alarm limit setting.
FiSev Too High	152180	MDC_CONC_AWAY_SEVOFL_INSP	MDC	1.4.1.152180	P	H	FiSev is higher than or equal to the high alarm limit setting.
FiSev Too Low	152180	MDC_CONC_AWAY_SEVOFL_INSP	MDC	1.4.1.152180	P	L	FiSev is lower than or equal to the low alarm limit setting.

Alert	OBX-3.1	OBX-3.2	OBX-3.3	OBX-4	Type (P or T)	Threshold (H or L)	Description
EtIso Too High	152100	MDC_CONC_AWAY_ISOFL_ET	MDC	1.4.1.152100	P	H	EtIso is higher than or equal to the high alarm limit setting.
EtIso Too Low	152100	MDC_CONC_AWAY_ISOFL_ET	MDC	1.4.1.152100	P	L	EtIso is lower than or equal to the low alarm limit setting.
FiIso Too High	152184	MDC_CONC_AWAY_ISOFL_INSP	MDC	1.4.1.152184	P	H	FiIso is higher than or equal to the high alarm limit setting.
FiIso Too Low	152184	MDC_CONC_AWAY_ISOFL_INSP	MDC	1.4.1.152184	P	L	FiIso is lower than or equal to the low alarm limit setting.

Table 22 Non-Threshold Alerts IDs

Alert	OBX-3.1	OBX-3.2	OBX-3.3	OBX-4	Type (P, T or A)	Description
Apnea	199680	MDC_EVT_APNEA	MDC	1.14.0.199680	P	Two triggering conditions are met simultaneously: 1. Paw is lower than (PEEP+3) cmH2O for more than 30 seconds. 2. TVe is lower than 10 ml for more than 30 seconds.
Apnea > 2 min	30018	MNDRY_EVT_VENT_RESP_APNEA_2_MIN	99MNDRY	1.14.0.30018	P	No breath has been detected within the last 120 seconds.
Apnea CO2	199680	MDC_EVT_APNEA	MDC	1.8.1.199680	P	Appear when no CO2 breath has been detected within the last CO2 Apnea Delay Time (10s-40s). And it shall be cleared as soon as one CO2 breath is detected.
Pressure Limiting	30111	MNDRY_EVT_PRESSURE_LIMITING	99MNDRY	1.14.0.30111	P	Paw is greater than or equal to Plimit
Continuous Airway Pressure	30022	MNDRY_EVT_CONT_PRES_15_SEC	99MNDRY	1.14.0.30022	P	The Paw in the breathing circuit is greater than sustained airway pressure alarm limit for 15 seconds

Alert	OBX-3.1	OBX-3.2	OBX-3.3	OBX-4	Type (P, T or A)	Description
Negative Airway Pressure	30020	MNDRY_EVT_PRESS_AWAY_PSA	99MNDRY	1.14.0.30020	P	Paw is less than -10 cmH2O for 1 second.
Startup						
Bundle Version Error	30883	MNDRY_EVT_BUNDLE_VER_ERR	99MNDRY	1.14.0.30883	T	Current real software version unmatched with bundle vesion file.
Bundle Version: Time out	30884	MNDRY_EVT_BUNDLE_VER_TIMEOUT	99MNDRY	1.14.0.30884	T	Bundle version selftest result cannot be obtained due to communication error.
Flowmeter Voltage Error	30720	MNDRY_EVT_ANES_FLOWMETER_VOLTAGE_ERR	99MNDRY	1.14.0.30720	T	DVCC, AVDD or VC voltage error.
Flowmeter Selftest Error	30190	MNDRY_EVT_SELFTEST_ERROR	99MNDRY	1.14.0.30190	T	1.CPU, Flash or WTD error. 2.Table blank or error.
Flowmeter Selftest: Time out	30738	MNDRY_EVT_ANES_FLOW_SENSOR_SELFT_TIMEOUT	99MNDRY	1.14.0.30738	T	Flowmeter selftest result cannot be obtained due to communication error.(A3,A5)
Flowmeter Selftest Error	30190	MNDRY_EVT_SELFTEST_ERROR	99MNDRY	1.14.0.30190	T	1.CPU Selftest Error 2. RAM Selftest Error 3. Address line Selftest Error 4. Watchdog Selftest Error 5. Flash Selftest Error 6. O2 Proportional Valve Selftest Error 7. Air Proportional Valve Selftest Error 8. N2O Proportional Valve Selftest Error 9. O2 Branch Circuit Leakage 10. Air Branch Circuit Leakage 11. N2O Branch Circuit Leakage 12. Read Zero Error 13. FPGA Configure Error

Alert	OBX-3.1	OBX-3.2	OBX-3.3	OBX-4	Type (P, T or A)	Description
Flowmeter Selftest: Time out	30738	MNDRY_EVT_ANES_FLOW_SENSOR_SELFT_TIMEOUT	99MNDRY	1.14.0.30738	T	Flowmeter selftest result cannot be obtained due to communication error.(A7)
Aux Control Module Selftest Error	30190	MNDRY_EVT_SELFTEST_ERROR	99MNDRY	1.14.0.30190	T	1.CPU Flash WTD error. 2.After power on, cpu board can't communicate with the Auxi Ctrl board.
Aux Control Module Selftest: Time out	30190	MNDRY_EVT_SELFTEST_ERROR	99MNDRY	1.14.0.30190	T	Aux control module selftest result cannot be obtained due to communication error.
Ventilator Selftest Error	30190	MNDRY_EVT_SELFTEST_ERROR	99MNDRY	1.14.0.30190	T	1.CPU, TIMER, RAM, WTD, EEPROM or AD error 2.After power on, cpu board can't communicate with the ventilator board.
Ventilator Selftest: Time out	30190	MNDRY_EVT_SELFTEST_ERROR	99MNDRY	1.14.0.30190	T	Ventilator selftest result cannot be obtained due to communication error
Ventilator Voltage Error	30657	MNDRY_EVT_ANES_VENTILATOR_VOLTAGE_ERR	99MNDRY	1.14.0.30657	T	5V or 12V voltage error

Alert	OBX-3.1	OBX-3.2	OBX-3.3	OBX-4	Type (P, T or A)	Description
Calibrate Flow Sensor and Insp Valve	30724	MNDRY_EVT_ANES_CAL_DATA_ERR	99MNDRY	1.14.0.30724	T	1.Cal. Table isn't found in EEPROM. 2.Checksum of Cal. Table don't match.
Calibrate Pressure Sensor and PEEP Valve	30724	MNDRY_EVT_ANES_CAL_DATA_ERR	99MNDRY	1.14.0.30724	T	1.Cal. Table isn't found in EEPROM. 2.Checksum of Cal. Table don't match.
Calibrate O2 Sensor	30670	MNDRY_EVT_ANES_CALIBRATE_O2_SENSOR	99MNDRY	1.14.0.30670	T	1.Cal. Table isn't found in EEPROM. 2.Checksum of Cal. Table don't match.
Ventilator Initialization Error	30885	MNDRY_EVT_VENT_INIT_ERR	99MNDRY	1.14.0.30885	T	After power on, cpu board can't send the parameter settings to ventilator board.
Ventilator Initialization: Time out	30886	MNDRY_EVT_VENT_INIT_TIMEOUT	99MNDRY	1.14.0.30886	T	Ventilator Initialization result cannot be obtained due to communication error
Drive Gas Pressure Low	30591	MNDRY_EVT_ANES_DIRVE_GAS_PRESSURE_LOW	99MNDRY	1.14.0.30591	T	Drive Gas Pressure Low
O2 Supply Failure	30592	MNDRY_EVT_ANES_O2_SUPPLY_FAILURE	99MNDRY	1.14.0.30592	T	O2 Supply Failure
Power Supply Voltage Error	30428	MNDRY_EVT_POWER_BOARD_VOL_ERROR	99MNDRY	1.14.0.30428	T	3.3V, 5V, 12V voltage error
RT Clock Needs Battery	30887	MNDRY_EVT_RT_CLOCK_BATT_FAIL	99MNDRY	1.14.0.30887	T	There is no button cell available in the system, or the battery is empty.
RT Clock Failure	30433	MNDRY_EVT_RT_CLOCK_ERROR	99MNDRY	1.14.0.30433	T	RT chip malfunction.

Alert	OBX-3.1	OBX-3.2	OBX-3.3	OBX-4	Type (P, T or A)	Description
Keyboard Self Test Error	30699	MNDRY_EVT_ANES_KEY_ERR	99MNDRY	1.14.0.30699	T	Keyboard Self Test Error
Keyboard Self Test : Time out	30699	MNDRY_EVT_ANES_KEY_ERR	99MNDRY	1.14.0.30699	T	Keyboard Self Test result cannot be obtained due to communication error
AG Startup						
External AG Self Test Error	30190	MNDRY_EVT_SELFTEST_ERROR	99MNDRY	1.9.0.30190	T	If the module sends the ErrorMsg, except for Data limit error and Unspecified Accuracy, "External AG Self Test Error"shall be triggered
Internal AG Error 02	30740	MNDRY_EVT_ANES_INTERNAL_AG_ERR	99MNDRY	1.14.0.30740	T	If the module sends the ErrorMsg, except for Data limit error and Unspecified Accuracy, "Internal AG Error 02" shall be triggered
External AG: Time out	30190	MNDRY_EVT_SELFTEST_ERROR	99MNDRY	1.9.0.30190	T	External AG selftest result cannot be obtained due to communication error
Internal AG: Time out	30190	MNDRY_EVT_SELFTEST_ERROR	99MNDRY	1.14.0.30190	T	Internal AG selftest result cannot be obtained due to communication error
CPU Runtime						
IP Address Conflict	30381	MNDRY_EVT_IP_CONFLICT	99MNDRY	1.14.0.30381	T	The IP address is same with other machine in the local network.
Fan Failure	30888	MNDRY_EVT_FAN_FAILURE	99MNDRY	1.14.0.30888	T	Speed of fan is less or equal 20% coresponding speed
Fan Failure 02	30888	MNDRY_EVT_FAN_FAILURE	99MNDRY	1.14.0.30888	T	Speed of Module Rack fan is less than 3640
ACGO Failure	30687	MNDRY_EVT_ANES_ACGO_FAILURE	99MNDRY	1.14.0.30687	T	ACGO switch status error
Power Board Runtime						
Power System Comm Stop	30889	MNDRY_EVT_POWER_SUPPLY_COMM_STOP	99MNDRY	1.14.0.30889	T	Lost communication with cpu board for 10 seconds.

Alert	OBX-3.1	OBX-3.2	OBX-3.3	OBX-4	Type (P, T or A)	Description
Power Supply Voltage Error	30428	MNDRY_EVT_POWER_BOARD_VOL_ERROR	99MNDRY	1.14.0.30428	T	3.3V, 5V, 12V voltage error
Low Battery Voltage	30412	MNDRY_EVT_POWER_VOL_TOO_LOW	99MNDRY	1.14.0.30412	T	battery voltage is less than 10.6V for 5 seconds.
System going DOWN, Battery depleted!	196802	MDC_EVT_BATT_LO	MDC	1.14.0.196802	T	battery voltage is less than 10.2V.
Battery Undetected	30429	MNDRY_EVT_NO_BATTERY	99MNDRY	1.14.0.30429	T	Battery Undetected
Battery in Use	202884	MDC_EVT_STAT_DEV_BATT_OPERATED	MDC	1.14.0.202884	T	AC power fail
Power Board High Temp	30890	MNDRY_EVT_POWER_SUPPLY_TEMP_HI	99MNDRY	1.14.0.30890	T	Power board temp is greater than 95 C
Heating Module Failure	30714	MNDRY_EVT_ANES_HEATING_MODULE_FAILURE	99MNDRY	1.14.0.30714	T	1.Both resistance temps are greater than 105 C or less than 0 C for 20 seconds. 2. One of resistance temp is greater than 110 C for 15 seconds.
Breathing System Not Mounted	30714	MNDRY_EVT_ANES_POWER_CIRCUIT_NO_MOUNT	99MNDRY	1.14.0.30714	T	Breathing system not mounted
Electronic Flowmeter Board Runtime						
Flowmeter Voltage Error	30715	MNDRY_EVT_ANES_FLOWMETER_VOLTAGE_ERR	99MNDRY	1.14.0.30715	T	DVCC, AVDD or VC voltage error

Alert	OBX-3.1	OBX-3.2	OBX-3.3	OBX-4	Type (P, T or A)	Description
N2O Flow Too High	30716	MNDRY_EVT_ANES_N2O_FLOW_HI	99MNDRY	1.14.0.30716	T	N2O flow is greater than 15L/min for 1 second.
O2 Flow Too High	30717	MNDRY_EVT_ANES_O2_FLOW_HI	99MNDRY	1.14.0.30717	T	O2 flow is greater than 25L/min for 1 second.
Air Flow Too High	30718	MNDRY_EVT_ANES_AIR_FLOW_HI	99MNDRY	1.14.0.30718	T	Air flow is greater than 20L/min for 1 second.
O2-N2O Ratio Error	30719	MNDRY_EVT_ANES_O2_N2O_RATIO_ERR	99MNDRY	1.14.0.30719	T	N2O flow is greater than 0.5 L/min and greater than 4 times O2 flow, this condition last for 1.6 seconds.
Flowmeter Comm Stop	30720	MNDRY_EVT_ANES_FLOWMETER_COMM_STOP	99MNDRY	1.14.0.30720	T	Lost communication with cpu board for 10 seconds.
No Fresh Gas	30597	MNDRY_EVT_ANES_NO_FRESH_GAS	99MNDRY	1.14.0.30597	T	Fresh gas flow is less than 50 mL/min for 5 seconds when machine is not in Standby mode or Monitor mode.
Internal N2O Flow Failure	30721	MNDRY_EVT_ANES_INTERNAL_N2O_SENSOR_ERR	99MNDRY	1.14.0.30721	T	The I2C communication between CPU and N2O flow sensor failure
Internal O2 Flow Failure	30722	MNDRY_EVT_ANES_INTERNAL_O2_SENSOR_ERR	99MNDRY	1.14.0.30722	T	The I2C communication between CPU and O2 flow sensor failure
Internal Air Flow Failure	30723	MNDRY_EVT_ANES_INTERNAL_AIR_SENSOR_ERR	99MNDRY	1.14.0.30723	T	The I2C communication between CPU and Air flow sensor failure
Electronic Flow Control System Runtime						
Electronic Flow Control Error	30727	MNDRY_EVT_ANES_ELEC_FLOW_CTRL_ERR	99MNDRY	1.14.0.30727	T	CPU AVDD Power Voltage too low
	30727	MNDRY_EVT_ANES_ELEC_FLOW_CTRL_ERR	99MNDRY	1.14.0.30727	T	CPU AVDD Power Voltage too high

Alert	OBX-3.1	OBX-3.2	OBX-3.3	OBX-4	Type (P, T or A)	Description
	30727	MNDRY_EVT_ANES_ELEC_FLOW_CTRL_ERR	99MNDRY	1.14.0.30727	T	CPU DVDD Power Voltage too low
	30727	MNDRY_EVT_ANES_ELEC_FLOW_CTRL_ERR	99MNDRY	1.14.0.30727	T	CPU DVDD Power Voltage too high
	30727	MNDRY_EVT_ANES_ELEC_FLOW_CTRL_ERR	99MNDRY	1.14.0.30727	T	CPU DVCC Power Voltage too high
	30727	MNDRY_EVT_ANES_ELEC_FLOW_CTRL_ERR	99MNDRY	1.14.0.30727	T	CPU DVCC Power Voltage too low
	30727	MNDRY_EVT_ANES_ELEC_FLOW_CTRL_ERR	99MNDRY	1.14.0.30727	T	FPGA VPP Voltage too low
	30727	MNDRY_EVT_ANES_ELEC_FLOW_CTRL_ERR	99MNDRY	1.14.0.30727	T	FPGA VPP Voltage too high
	30727	MNDRY_EVT_ANES_ELEC_FLOW_CTRL_ERR	99MNDRY	1.14.0.30727	T	FPGA 3.3V Voltage too low
	30727	MNDRY_EVT_ANES_ELEC_FLOW_CTRL_ERR	99MNDRY	1.14.0.30727	T	FPGA 3.3V Voltage too high
	30727	MNDRY_EVT_ANES_ELEC_FLOW_CTRL_ERR	99MNDRY	1.14.0.30727	T	FPGA 1.2V Voltage too low
	30727	MNDRY_EVT_ANES_ELEC_FLOW_CTRL_ERR	99MNDRY	1.14.0.30727	T	FPGA 1.2V Voltage too high
	30727	MNDRY_EVT_ANES_ELEC_FLOW_CTRL_ERR	99MNDRY	1.14.0.30727	T	FPGA DVCC Voltage too low
	30727	MNDRY_EVT_ANES_ELEC_FLOW_CTRL_ERR	99MNDRY	1.14.0.30727	T	FPGA DVCC Voltage too high

Alert

Alert	OBX-3.1	OBX-3.2	OBX-3.3	OBX-4	Type (P, T or A)	Description
	30894	MNDRY_EVT_AUTO_TOTAL_FLOW_SENSOR_SELFTEST_FAIL	99MNDRY	1.14.0.30894	T	Automatic total flow sensor self test failed
No Fresh Gas	30597	MNDRY_EVT_ANES_NO_FRESH_GAS	99MNDRY	1.14.0.30597	T	No Fresh gas alarm shall be disabled for 5 seconds when machine is not in Standby mode, Monitor mode or Flow Paused state. (triggered by electronic flowmeters software) The alarm message “No Fresh Gas” shall be disabled during the first 5 seconds after exit Standby mode, Monitor mode or Flow Paused state. (For system software)
O2 Branch Flow Not Achieved	30736	MNDRY_EVT_ANES_O2_FLOW_UNACHIEVED	99MNDRY	1.14.0.30736	T	O2 branch measured flow is over the O2 branch target flow ±max (10%, 200mlpm)
Balance Gas Branch Flow Not Achieved	30737	MNDRY_EVT_ANES_GAS_FLOW_UNACHIEVED	99MNDRY	1.14.0.30737	T	Balance branch measured flow is over the Balance branch target flow ±max (10%, 200mlpm)
Backup Flow Control Deployment Failure	30730	MNDRY_EVT_ANES_BACKUP_FLOW_DEP_ERR	99MNDRY	1.14.0.30730	T	Solenoid Actuator Error
Backup Flow Control Retraction Failure	30731	MNDRY_EVT_ANES_BACKUP_FLOW_RET_ERR	99MNDRY	1.14.0.30731	T	Stepper Motor Error

Alert	OBX-3.1	OBX-3.2	OBX-3.3	OBX-4	Type (P, T or A)	Description
Air Supply Failure	30732	MNDRY_EVT_ANES_AIR_SUPPLY_FAIL	99MNDRY	1.14.0.30732	T	Air Supply Pressure Low
N2O Supply Failure	30733	MNDRY_EVT_ANES_N2O_SUPPLY_FAIL	99MNDRY	1.14.0.30733	T	N2O Supply Pressure Low
Backup Flow Control Valves Open	30734	MNDRY_EVT_ANES_BACKUP_FLOW_VALVE_OPEN	99MNDRY	1.14.0.30734	T	Needle Vavle is not closed
	30734	MNDRY_EVT_ANES_BACKUP_FLOW_VALVE_OPEN	99MNDRY	1.14.0.30734	T	BFCS is not closed
Backup Flow Control is enabled	30735	MNDRY_EVT_ANES_BACKUP_FLOW_ENABLED	99MNDRY	1.14.0.30735	T	Backup Flow Control is enabled
Flowmeter Comm Stop	30720	MNDRY_EVT_ANES_FLOWMETER_COMM_STOP	99MNDRY	1.14.0.30720	T	Lost communication with cpu board for 10 seconds.The Flowmeter Comm Stop shall be detected by both Main board CPU and Flowmeter CPU.
KeyBoard Comm Stop	30699	MNDRY_EVT_ANES_KEY_ERR	99MNDRY	1.14.0.30699	T	Lost communication with cpu board for 10 seconds.
Total Flow Sensor Self Test Time Out	30738	MNDRY_EVT_ANES_FLOW_SENSOR_SELFT_TIMEOUT	99MNDRY	1.14.0.30738	T	Automatic total flow sensor self test time out occurs
Backup Flow Control Error	30728	MNDRY_EVT_ANES_BACKUP_FLOW_CRTL_ERR	99MNDRY	1.14.0.30728	T	BFCS Deployment Position sensor Error
	30728	MNDRY_EVT_ANES_BACKUP_FLOW_CRTL_ERR	99MNDRY	1.14.0.30728	T	BFCS Retraction Position sensor Error

Alert	OBX-3.1	OBX-3.2	OBX-3.3	OBX-4	Type (P, T or A)	Description
	30728	MNDRY_EVT_ANES_BACKUP_FLOW_CRTL_ERR	99MNDRY	1.14.0.30728	T	LED Power Voltage too low
	30728	MNDRY_EVT_ANES_BACKUP_FLOW_CRTL_ERR	99MNDRY	1.14.0.30728	T	LED Power Voltage too high
	30728	MNDRY_EVT_ANES_BACKUP_FLOW_CRTL_ERR	99MNDRY	1.14.0.30728	T	BFCS/EFCS 3-Way Valve Error

Alert	OBX-3.1	OBX-3.2	OBX-3.3	OBX-4	Type (P, T or A)	Description
Pinsp Not Achieved	30665	MNDRY_EVT_ANES_PINSP_NOT_ACHIEVED	99MNDRY	1.14.0.30665	T	Ppeak don't reach the setting Pinsp in pressure mode.
Vt Not Achieved	30666	MNDRY_EVT_ANES_VT_NOT_ACHIEVED	99MNDRY	1.14.0.30666	T	Vt didn't reach the setting Vt in volume mode.
ACGO 3-way Valve Failure	30687	MNDRY_EVT_ANES_ACGO_3WAY_VALVE_FAILURE	99MNDRY	1.14.0.30687	T	ACGO 3-way Valve status is error.
Automatic Ventilation Disabled	30694	MNDRY_EVT_ANES_AUTOMATIC_VENT_DISABLED	99MNDRY	1.14.0.30694	T	Power on self test failed, and the result is "Manual Only".
Auto Ventilation Disabled-Leak Test Failed	30695	MNDRY_EVT_ANES_AUTO_VENT_DISABLED_LEAK_FAIL	99MNDRY	1.14.0.30695	T	Automatic/Manual circuit leak test failed, and the result is "Manual Only".
Auto Ventilation is Non-Functional	30696	MNDRY_EVT_ANES_AUTO_VENT_NON_FUNCTIONAL	99MNDRY	1.14.0.30696	T	When system is in the Auto Ventilation Non-functional state
Electronic ACGO Undetected	30698	MNDRY_EVT_ANES_NO_ELEC_ACGO	99MNDRY	1.14.0.30698	T	Electronic ACGO configuration incompatible with hardware.
Patient Circuit Leak	30589	MNDRY_EVT_ANES_PAT_CIRCUIT_LEAK	99MNDRY	1.14.0.30589	T	1. Vte is less than Vti to the maximum of 200ml and 50% for 30 seconds 2. Vti is less than Vt delivery in volume mode. 3.Patient not connected.

Alert	OBX-3.1	OBX-3.2	OBX-3.3	OBX-4	Type (P, T or A)	Description
CO2 Absorber Canister Not Locked	30667	MNDRY_EVT_ANES_CO2_CANISTER_NOT_MOUNTED	99MNDRY	1.14.0.30667	T	CO2 Canister Not Mounted
O2 Sensor Disconnected	30590	MNDRY_EVT_ANES_NO_O2_SENSOR	99MNDRY	1.14.0.30590	T	No O2 sensor is connected (the O2 sensor can be a galvanic O2 sensor or a paramagnetic O2 sensor)
Replace O2 sensor	30668	MNDRY_EVT_ANES_REPLACE_O2_SENSOR	99MNDRY	1.14.0.30668	T	The O2 value is less than 5%
Perform 100% O2 Sensor Calibration	30708	MNDRY_EVT_ANES_CAL_O2_FOR_100	99MNDRY	1.14.0.30708	T	O2 value is greater than 110% or between 5% and 15% for 3 seconds.
Ventilator Comm Stop	30671	MNDRY_EVT_ANES_VENTILATOR_COMM_STOP	99MNDRY	1.14.0.30671	T	Lost communication with cpu board for 10 seconds.
Drive Gas Pressure Low	30591	MNDRY_EVT_ANES_DIRVE_GAS_PRESSURE_LOW	99MNDRY	1.14.0.30591	T	Drive Gas Pressure Low
O2 Supply Failure	30592	MNDRY_EVT_ANES_O2_SUPPLY_FAILURE	99MNDRY	1.14.0.30592	T	O2 Supply Failure
Fresh Gas Flow Too High	30685	MNDRY_EVT_ANES_FRESH_GAS_FLOW_HI	99MNDRY	1.14.0.30685	T	In VCV and SIMV-VC modes, the fresh gas flow is greater than or equal to flow needed.
AG Module						
AG Hardware Error	30349	MNDRY_EVT_AG_HARDWARE_ERROR	99MNDRY	1.9.0.30349	T	/
O2 Sensor Error	30744	MNDRY_EVT_ANES_O2_SENSOR_ERR	99MNDRY	1.9.0.30744	T	/

Alert	OBX-3.1	OBX-3.2	OBX-3.3	OBX-4	Type (P, T or A)	Description
External AG Self Test Error	30190	MNDRY_EVT_SELFTEST_ERROR	99MNDRY	1.9.0.30190	T	/
AG Hardware Malfunction	30745	MNDRY_EVT_ANES_AG_HARDWARE_MALFUNCION	99MNDRY	1.9.0.30745	T	/
AG Init Error	30189	MNDRY_EVT_INIT_ERROR	99MNDRY	1.9.0.30189	T	/
AG No Water trap	30345	MNDRY_EVT_AG_NO_WATERTRAP	99MNDRY	1.9.0.30345	T	/
AG Water trap Type Wrong	30347	MNDRY_EVT_AG_WRONG_WATERTRAP	99MNDRY	1.9.0.30347	T	When the patient type is infant, but the water trap type is adult/ pediatric, this alarm will be triggered.
AG Change Water trap	30346	MNDRY_EVT_AG_CHANGE_WATERTRAP	99MNDRY	1.9.0.30346	T	/
AG Comm Stop	30191	MNDRY_EVT_COMM_STOP	99MNDRY	1.9.0.30191	T	/
AG Airway Occluded	30348	MNDRY_EVT_AG_OCCLUSION	99MNDRY	1.9.0.30348	T	Pump rate is lower than 20ml/min for 1 second
AG Zero Failed	30356	MNDRY_EVT_AG_ZEROING_FAILED	99MNDRY	1.9.0.30356	T	Gas measurements may have bad accuracy during Zeroing
Mixed Agent	30128	MNDRY_EVT_MIX_GAS	99MNDRY	1.9.0.30128	T	MAC<3
Mixed Agent	30128	MNDRY_EVT_MIX_GAS	99MNDRY	1.9.0.30128	T	When there is an invalid MAC value and there is mixed agent at the same time, system shall trigger this alarm
Mixed Agent and MAC •	30743	MNDRY_EVT_ANES_INVALID_MAC_VALUE	99MNDRY	1.14.0.30743	T	0 $ & •

Alert	OBX-3.1	OBX-3.2	OBX-3.3	OBX-4	Type (P, T or A)	Description
External AG Module Disconnected	30368	MNDRY_EVT_AG_NOT_CONNECTED	99MNDRY	1.9.0.30368	T	When external AG is unload for the A7
Incompatible AG Software Version	30697	MNDRY_EVT_ANES_INCOMPATIBLE_AG_SW	99MNDRY	1.14.0.30697	T	When the AG Version Limit is On, and the AG module is loaded while the AG software version is lower than 1.7.3.0, this alarm will be triggered.
CO2 Over Range	30895	MNDRY_EVT_CO2_OUT_OF_RANGE	99MNDRY	1.14.0.30895	T	CO2 is outside of its measurable range.
N2O Over Range	30896	MNDRY_EVT_N2O_OUT_OF_RANGE	99MNDRY	1.14.0.30896	T	N2O is outside of its measurable range.
Hal Over Range	30898	MNDRY_EVT_HAL_OUT_OF_RANGE	99MNDRY	1.14.0.30898	T	O2 is outside of its measurable range.
Enf Over Range	30899	MNDRY_EVT_ENF_OUT_OF_RANGE	99MNDRY	1.14.0.30899	T	Halothane is outside of measurable range.
Iso Over Range	30900	MNDRY_EVT_ISO_OUT_OF_RANGE	99MNDRY	1.14.0.30900	T	Desflurane is outside of measurable range.
Sev Over Range	30901	MNDRY_EVT_SEV_OUT_OF_RANGE	99MNDRY	1.14.0.30901	T	Enflurane is outside of itsmeasurable range.
Des Over Range	30902	MNDRY_EVT_DES_OUT_OF_RANGE	99MNDRY	1.14.0.30902	T	Sevoflurane is outside of its measurable range.
O2 Over Range	30897	MNDRY_EVT_O2_OUT_OF_RANGE	99MNDRY	1.14.0.30897	T	Isoflurane is outside of its measurable range.
Rate Over Range	30746	MNDRY_EVT_ANES_RATE_OVER_RANGE	99MNDRY	1.14.0.30746	T	The monitoring value of Rate (AG) exceeds the measurable range. When this kind of alarm is triggered, "---" will be displayed

Alert	OBX-3.1	OBX-3.2	OBX-3.3	OBX-4	Type (P, T or A)	Description
Internal AG Error 01	30349	MNDRY_EVT_AG_HARDWARE_ERROR	99MNDRY	1.14.0.30349	T	Internal AG Hardware Error

C A Series HL7 Simulator Instructions

C.1 Overview

The A Series Simulator is designed as a demo tool based on Mindray A Series anesthesia systems, and it is mainly for the software developers and/or systems integrators that wish to communicate with Mindray A Series anesthesia systems that have software bundle version 02.11.00.

Before using it, the user should install the **A Series Simulator** correctly in their PC or laptop first.

C.2 Simulator Setup

Right clicking the mouse on the simulator screen will open a dialog (see figure below), by which the user can see the available features and possible to change its configuration.

Device Setting

The Device Setting dialog will look like:

By device setting dialog, the user can change the machine type as well as configure the system functions. Any changes on Device Setting can only take effect after the simulator reboot.

About

The About dialog will look like:

Exit

Click the **Exit** to exit the simulator.

C.3 Keyboard Shortcuts

For A3/A5/A7

- The user can switch the Auto/Manual state via the “m” key in keyboard.

For A3/A5 only

- The user can turn ON/OFF the fresh gas flow via the “f” key in keyboard.

FOR YOUR NOTES

Mindray DS USA, Inc. • 800 MacArthur Boulevard • Mahwah, NJ 07430 • USA •

Dom. Customer Service: 1.800.288.2121 • Intl. Customer Service: +1.201.995.8000 •

Dom. Fax: 1.800.926.4275 • Intl. Fax: +1.201.995.8680 • www.mindray.com

Mindray Medical Netherlands B.V.• Drs. W. van Royenstraat 8 • P.O. Box 26 • 3870 CA Hoevelaken • The Netherlands • Tel: +31 33 25 44 911 • Fax: +31 33 25 37 621

Mindray (UK) Limited • 3 Percy Road • St. John's Park • Huntingdon • Cambridgeshire PE29 6SZ • United Kingdom • Tel: 01480 416840 • Fax: 01480 436588

Mindray Medical France SARL • Europarc Créteil •123, Chemin des Bassins •

94035 Créteil Cedex • France • Tel: (0)1.45.13.91.50 • Fax: (0)1.45.13.91.51

Mindray Medical Germany GmbH • Zwischen den Bächen 4 • 64625 Bensheim • Deutschland •

Tel: +49.6251.17524-0 • Fax: +49.6251.17524-20

Mindray Medical International Ltd. • 2813 Office Tower, Convention Plaza • No 1 Harbour RoadWanchai • Hong Kong • Tel: +852 2793 5596 • Fax: +852 2344 8824

Medstar Importação e Exportação Ltda • Av. Vereador José Diniz, 3300 • São Paulo, SP • CEP 04804-000 • Brazil • Tel: 55 11 2872-3385 • Fax: 55 11 2872-3385